AUVIO™

THE PERFORMANCE YOU NEED

32" 100W Soundbar with Dock for iPod® or iPhone™

User's Guide

40-294

Please read this user's guide before using your new Soundbar.

Contents

Important Safety Instructions 3
Warnings and Precautions 3
Overview 4
- Features 4
- Package Contents 4
- Front View 5
- Back View 6
- Remote Control 7

Setup 8
- Connect the FM Antenna 8
- Connect External Devices 8
- Connect Power 9
- Install Remote Control Batteries 10
- Setting the Clock 10

Basic Operation 11
- FM Radio 11
  - Storing Stations 11
  - Recalling Station 11
- Playing an iPod / iPhone 11
  - Dock and Charge your iPod / iPhone 11
  - Playing an iPod / iPhone 12
- Audio Settings 12
  - 3D Sound 12
  - Adjusting Bass and Treble 12
  - Display Brightness 12
- Select Source 13

Additional Information 13
- Troubleshooting 13
- Specifications 13
- FCC Information 14
- Limited Warranty 14

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators,heat registers,stoves,or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart,stand, tripod, bracket,or table specified by the manufacturer,or sold with the apparatus.When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture,does not operate normally, or has been dropped.

Warnings and Precautions

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, AND FULLY INSERT PLUG.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Using this product near fluorescent lighting may cause interference with of the remote. If the product is displaying erratic behavior, move away from any fluorescent lighting.

The product shall not be exposed to dripping or splashing and that no objects filled with liquids such as vases, shall be placed on apparatus.

The mains plug is used as the disconnect devide. It shall remain readily operable and should not be obstructed druing intended use. To be completely disconnected the apparatus from supply mains, the main plug of the product shall be disconnected from the mians socket outlet completely.

Overview

Features

- Powerful 50W RMS system enhances your music listening experience
- iPod Drawer conveniently opens when needed and hidden when not in use
- Plays and charges most dockable iPods

Package Contents

Soundbar

Remote Control

AC Adapter

FM Antenna

3.5mm Cable

RCA Cable

Video Cable

iPod™ / iPhone™ Dock Adapters (5)

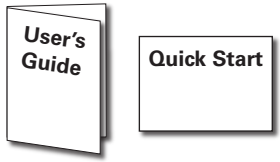

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

This lightning symbol is intended to alert you to the presence of uninsulated, dangerous voltage within this product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

The exclamation symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

Front View

POWER
Turn your soundbar on and off

FUNCTION
Select FM radio, iPod, IN1, IN 2, or AUX mode

EFFECT
Turn 3D virtural sound effect on and off, press and hold for 8 seconds to reset settings to default in standby mode

VOL– / VOL+
Decrease and increase volume

AUX
3.5 mm line input jack to connect addtional sound devices

iPhone / iPod Dock
Select and insert the docking adapter for your iPhone/iPod model, then insert your iPhone or iPod

Back View

FM ANT
Connect FM antenna

SUB OUT
Connect an external subwoofer

STEREO RCA INPUT
Connect to the audio output jacks on your external device (TV, DVD, game system, etc.)

VIDEO OUT
Connect to the video output jacks on your external device

DC IN 15V
Connect supplied DC15V power cord

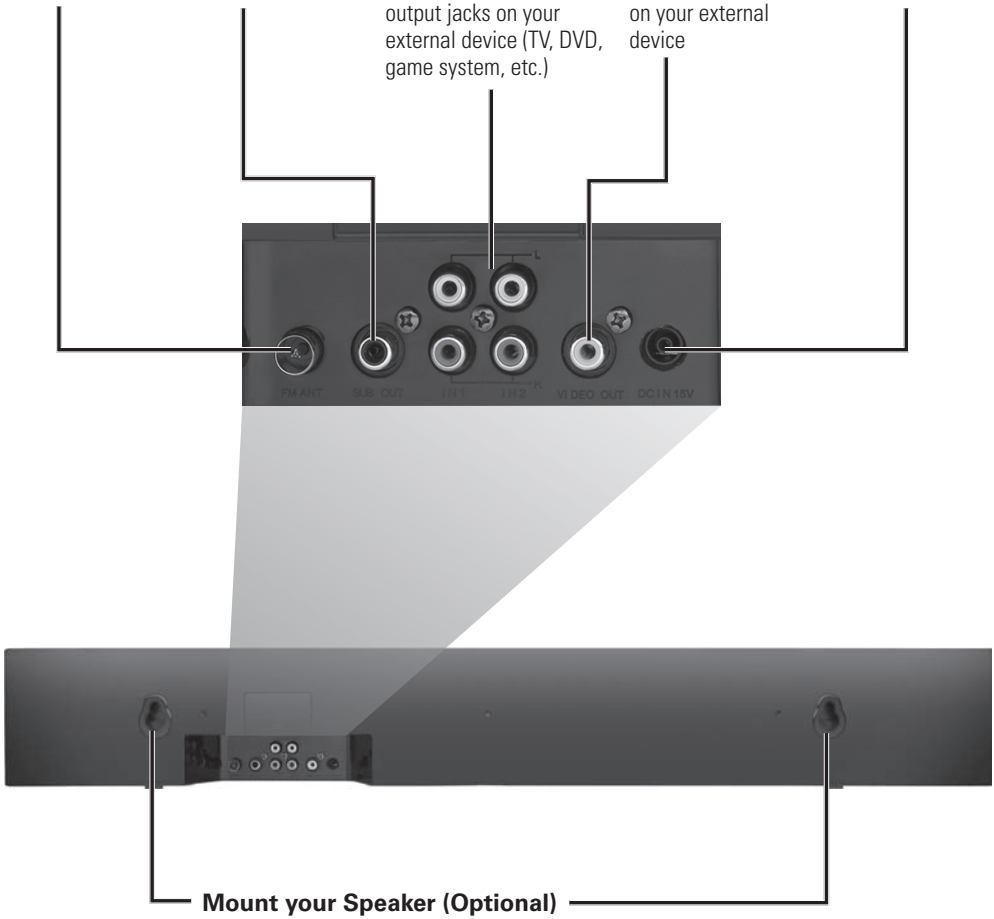

Mount your Speaker (Optional)

1. Use 2 screws (not supplied) with heads no bigger than the mount holes on your speaker.
2. Place the mount holes and slide down to secure the speaker.

Remote Control

MUTE – Turn sound on or off

EFFECT
Turn 3D virtual surround effect on or off

POWER – Turn the soundbar on or off.

FUNCTION – Select desired input mode

DISPLAY / TIME
Enter time setting mode, view current mode.

Number Buttons (0-9)
Input a radio station number.

VOL + / VOL –
Increase or decrease the volume

SUB + / SUB –
Increase or decrease subwoofer volume

TONE / DIMMER –
Adjust bass and treble levels, select display brightness.

MENU – Return to previous menu on a docked iPod.

ENTER – Make selections

◀◀ / ▶▶ / ▶II
Navigate left and right through menus, play, pause, skip forward or skip backward in iPod mode.

▲▼
Navigate up and down through menus

REPEAT / ST
Select repeat options from a docked iPod, select stereo or mono sound in FM radio mode.

SHUFFLE – Play tracks from your iPod / iPhone in random order.

Setup

① Connect the FM Antenna

Plug the supplied FM antenna into the **FM ANT** jack.

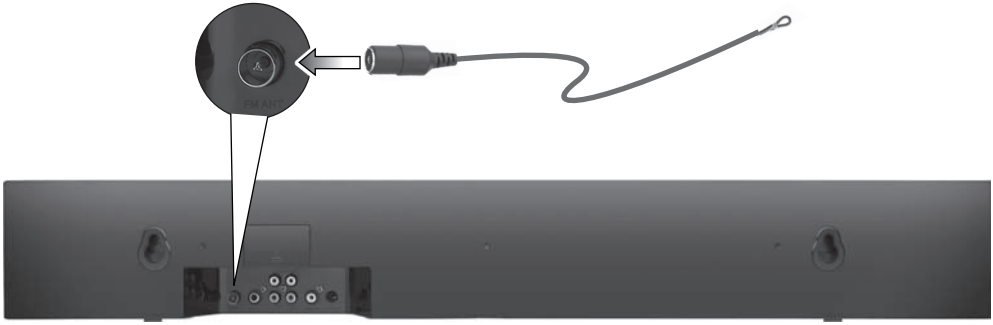

② Connect External Devices (Optional)

Subwoofer

Connect an external subwoofer

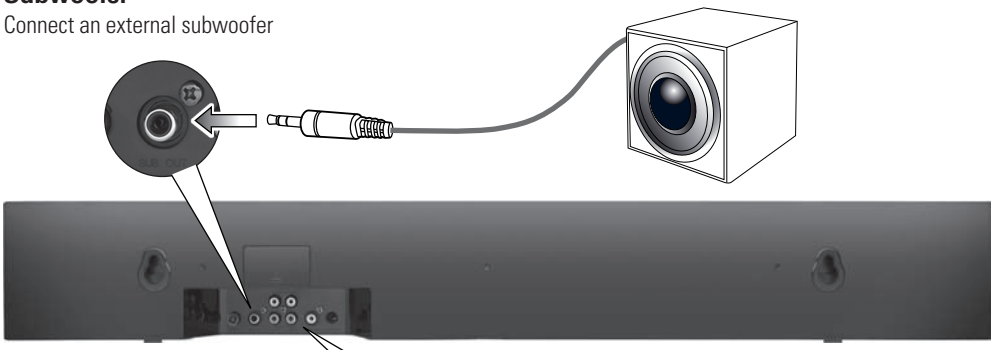

Audio Inputs

Use an audio cable to connect each device's audio output jacks to the soundbar's audio jacks, **IN 1** or **IN 2**. Red jacks are for right audio, and white jacks are for left audio.

Video Outputs

Use the video cable to connect each device's video input jack to the soundbar's **VIDEO OUT** jack.

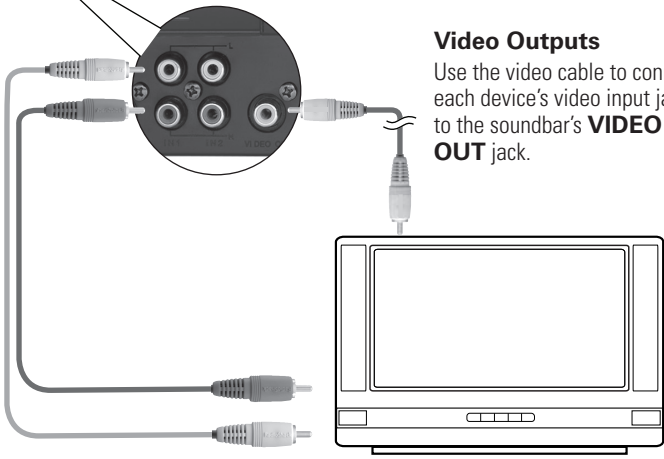

AUX

Connect an audio device using the 3.5mm mini-phono cable, or a 3.5 mm mini phono to RCA cable (not included) into the **AUX** jack.

Connect the other end into the audio output/headphone output on your audio device.

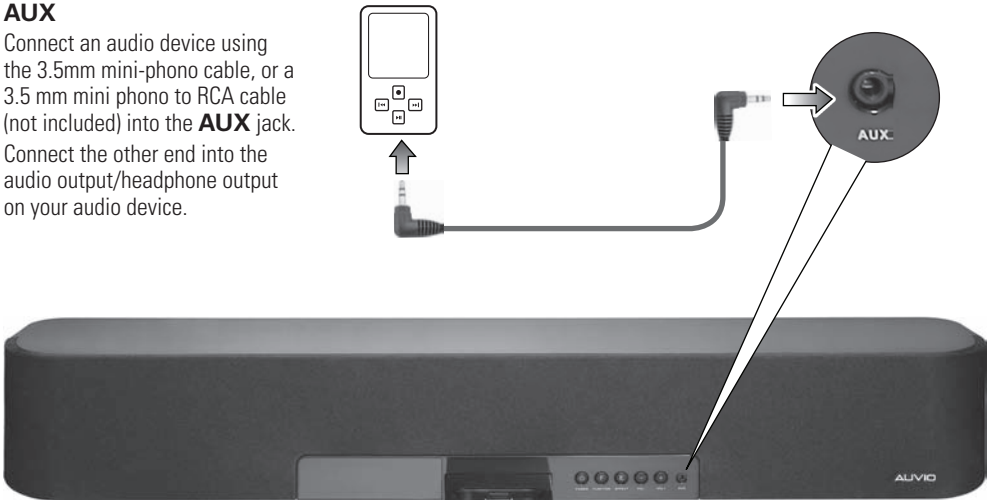

③ Connect Power

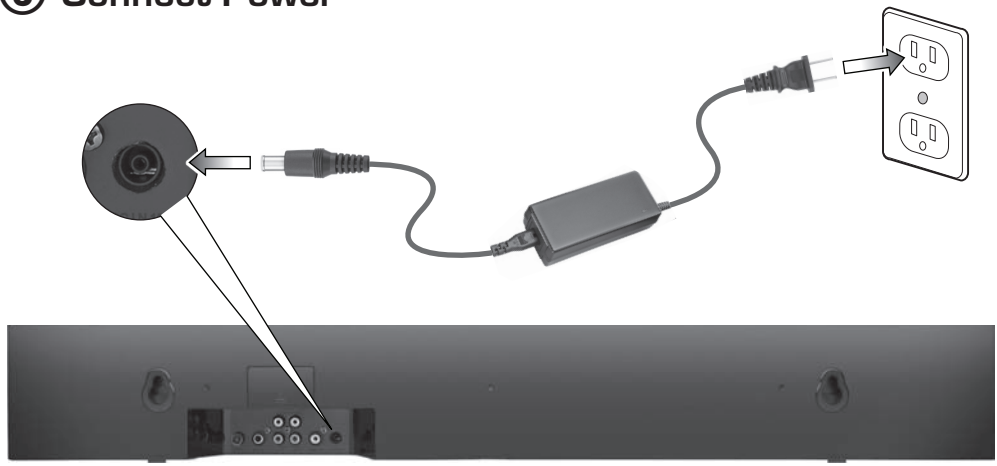

④ Install Remote Control Batteries

1. Press the tab to remove the battery cover.
2. Insert two AAA batteries (not supplied) as indicated by the polarity symbols (+ and –) marked on the remote control.
3. Replace the battery cover.

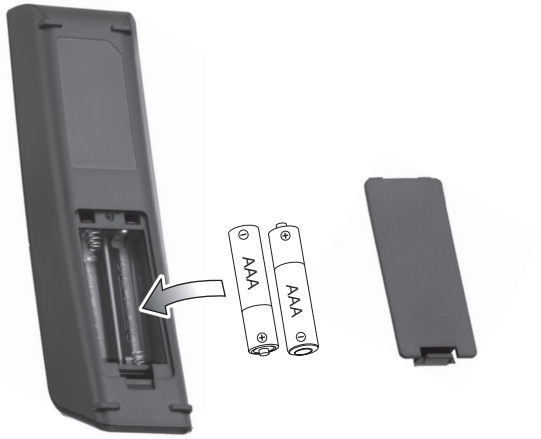

Battery Notes:

- *Dispose of batteries promptly and properly. Do not burn or bury them.*
- *Use only fresh batteries of the required size and type.*
- *Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.*
- *If you do not plan to use the remote control for a long time, remove the batteries. Batteries can leak chemicals that can damage electronic parts.*

⑤ Setting the Clock

1. In standby mode, press **DISPLAY/TIME** on the remote control. The first hour digit flashes.
2. Press ▲ or ▼ to adjust each hour and minutes digits.
3. Press ◀◀ or ▶▶ to move to the hour or minutes digit you want to adjust.

4. Press **DISPLAY/TIME** to save your settings.
5. Press **REPEAT/ST** on the remote control to select 12 h or 24 h time format.

Basic Operation

FM Radio

1. Press **POWER** to turn on the unit.
2. Press **FUNCTION** to select FM mode. *FM* displays.
3. Press ◀◀ or ▶▶ to tune down or up to find a station.

   Press and hold ◀◀ or ▶▶ to auto search stations.
4. Press **VOL +** or **VOL –** to adjust the volume.
5. Press **REPEAT/ST** on the remote control to select stereo or mono mode.

Storing Stations

1. Tune to the desired station.
2. Press **ENTER**. The program location flashes.
3. Press **0** through **9** on the remote control to select a memory location (total of 10 preset stations are available).
4. Press **ENTER** to store the station.

Recalling Station

1. To recall stored stations, press number **0** through **9** to access the desired memory location.

iPod/iPhone

Dock and Charge

1. Select the docking adapter that fits your iPod/iPhone model.

   Refer to the number marked on the adapters:

Adapter No.		Compatible Models
10		Video 60G/80G & Classic 10G
13		Nano 3G
14		Touch 1G
15		iPhone 3G
16		Touch 2G

2. Snap the adapter into the docking station.
3. Plug your iPod / iPhone into the adapter.

Playing Tracks

1. Dock your iPod / iPhone.
2. Press **POWER** to turn on the soundbar.
3. Press **FUNCTION** to select iPod mode. *IPOD* displays.

4. Press ►II to start and pause iPod / iPhone playback.

   Press ◄◄ or ►► to skip to the previous track or to the next track.

   Press and hold ◄◄ or ►► to search backwards or forwards in the current track.

   Press **REPEAT/ST** to select repeat the current track, repeat album or playlist or repeat off.

   Press **SHUFFLE** to play tracks in an album randomly in your iPod/iPhone.

   Press **MENU** to access the docked iPod menu.

   Press ▲ or ▼ to navigate iPod / iPhone menus.

***Note**: Your iPod / iPhone must be updated with the latest firmware from Apple in order for it to work properly with your sound bar.*

Audio Settings

3D Sound

Press **EFFECTS** to turn 3D sound on and off.

Adjusting Bass and Treble

1. Press **TONE/DIMMER** on the remote control until the display shows *BASS* or *TREB*.
2. Press **VOL +** or **VOL –** to adjust to the desired level.

Display Brightness

1. Press **TONE/DIMMER** on the remote control until the display shows *DIMMER* level.
2. Press **VOL +** or **VOL –** to adjust to the display brightness to the desired level.

Select Source

To play devices connected to your soundbar, you must select the correct input source.

1. Press **FUNCTION** repeatedly to select:
   - *IN1* or *IN2* to play devices connected to Audio Inputs.
   - *AUX* to play device connected to the line input jack.

Additional Information

Troubleshooting

Problem	Possible Solution
No sound	Make sure the power cord is plugged in.
	The batteries in the remote control may be dead. Replace the batteries and try again.
	The power outlet may be faulty. Plug in another device. If it does not work, have an electrician inspect the outlet.
	Check all wire connections. See pages 8-9.
Remote control does not work.	Replace batteries in the remote control.
	Be sure batteries are installed with correct polarity.
	Remove any obstacles between the remote control and TV.
Poor FM reception	Make sure FM antenna is plugged in.

Specifications

Output Power/Ch (@ 10% THD) ..... 12.5W x 2 + 25 W (Total 50W RMS/ 100W Peak)
Freq. Response ..... 50Hz ~ 20KHz
Operation Power ..... 100V~240V AC 50/60Hz.DC:15V 4A
Weight ..... 155.2 oz (4400g)
Dimensions (H × W × D) ..... 4.9 × 31.2 × 5.3 in (12.5 × 79.4 × 13.4 cm)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Ignition L.P. may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product	32" 100W Soundbar with Dock for iPod or iPhone
Model	40-294
Responsible Party	Ignition L.P., 3102 Maple Ave Suite 450 Dallas, TX 75201
Phone	866-315-0426

Limited Warranty

Ignition L.P. warrants this product against defects in materials and workmanship under normal use by the original purchaser for **one (1) year** after the date of purchase. IGNITION L.P. MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a Ignition L.P. Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase in the U.S. Ignition L.P. will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Ignition L.P. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

IGNITION L.P. EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY

OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, IGNITION L.P. SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY,

INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF IGNITION L.P. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact Ignition L.P. at:

Ignition L.P., 3102 Maple Ave. Suite 450, Dallas, TX 75201 02/09

For product support, call **1-866-315-0426**

Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.

Get more from your audio and video equipment. See what you've been missing. With Auvio, **you control the experience.**

Auvio was established by a group of technophiles to provide **high quality audio and video products** without the high sticker price. The Auvio philosophy is for you to experience audio and video as it was intended to be: **pure and distortion free.**

We know electronics can be intimidating. Auvio **simplifies your experience** by providing the right products, with the right specs, to work with your equipment.

Be confident about your purchase: your new Auvio product incorporates the **latest technology**, is built to the **highest quality** standards, and **reduces environmental impact** by complying with RoHS environmental restrictions.

© 2009. Ignition L.P. All rights reserved. Auvio is a trademark used by Ignition L.P.
Package and user's guide are recyclable. User's guide contains recycled material.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
iPhone is a trademark of Apple Inc.

Printed in China 08A09 40-294